

Getting Started

Staged Heating with the Bridge Pro



WHAT YOU NEED

HOMES UNDER 2,500 SQ FT

- 1 x Flair Puck Pro per head unit
- 1 x Bridge Pro:
 - set up as the networking hub connected to the internet via the 2.4 GHz Wi-Fi network
 - wired into the secondary heating equipment, boiler or electric baseboard

HOMES OVER 2,500 SQ FT

- 1 x Puck Pro per head unit
- 1 x Bridge for every 2500 sq ft:
 - set up as the networking hub connected to the internet via the 2.4 GHz Wi-Fi network or wired into the router using the ethernet cable provided
- 1 x Bridge Pro:
 - paired with the Bridge using our radio frequency feature
 - wired into the secondary heating equipment

FIELD SUPPLIED ITEMS

Additional items needed for installation that are not included with Flair products:

For Boiler:

- Thermostat wire (min. 3 wire)
- Wire nuts

For Electric Baseboard:

- Thermostat wire (min. 3 wire)
- Wire nuts
- Recommended line-level relays (from Aube Technologies):
 - Electric Heating Relay (w/o Transformer) | SKU: RC840
 - 120 V Relay w/ Built in 24V transformer | SKU: RC840T-120
 - 240V Relay w/ Build in 24V transformer | SKU: RC840T-240
- Miscellaneous electrical supplies, i.e. junction boxes, strain relievers, etc.

ADDITIONAL RESOURCES

[FLAIR STAGED HEATING SOLUTION GUIDE](#)

[BRIDGE PRO SPEC SHEET](#)

For troubleshooting and support topics, visit our [Pro Support Center](#) or contact our [Pro Support Team](#). Access Pro Support contact details by logging into the [Pro Portal](#), or reach out to your Flair representative or distributor.

Not yet a Flair Pro?

Complete the [Pro application](#) to schedule training and get access to discounted test units.

[PRO SUPPORT CENTER](#)

[PRO PORTAL LOGIN](#)

[PRO REGISTRATION](#)