


Wiring Diagrams

For Flair Products
and Solutions

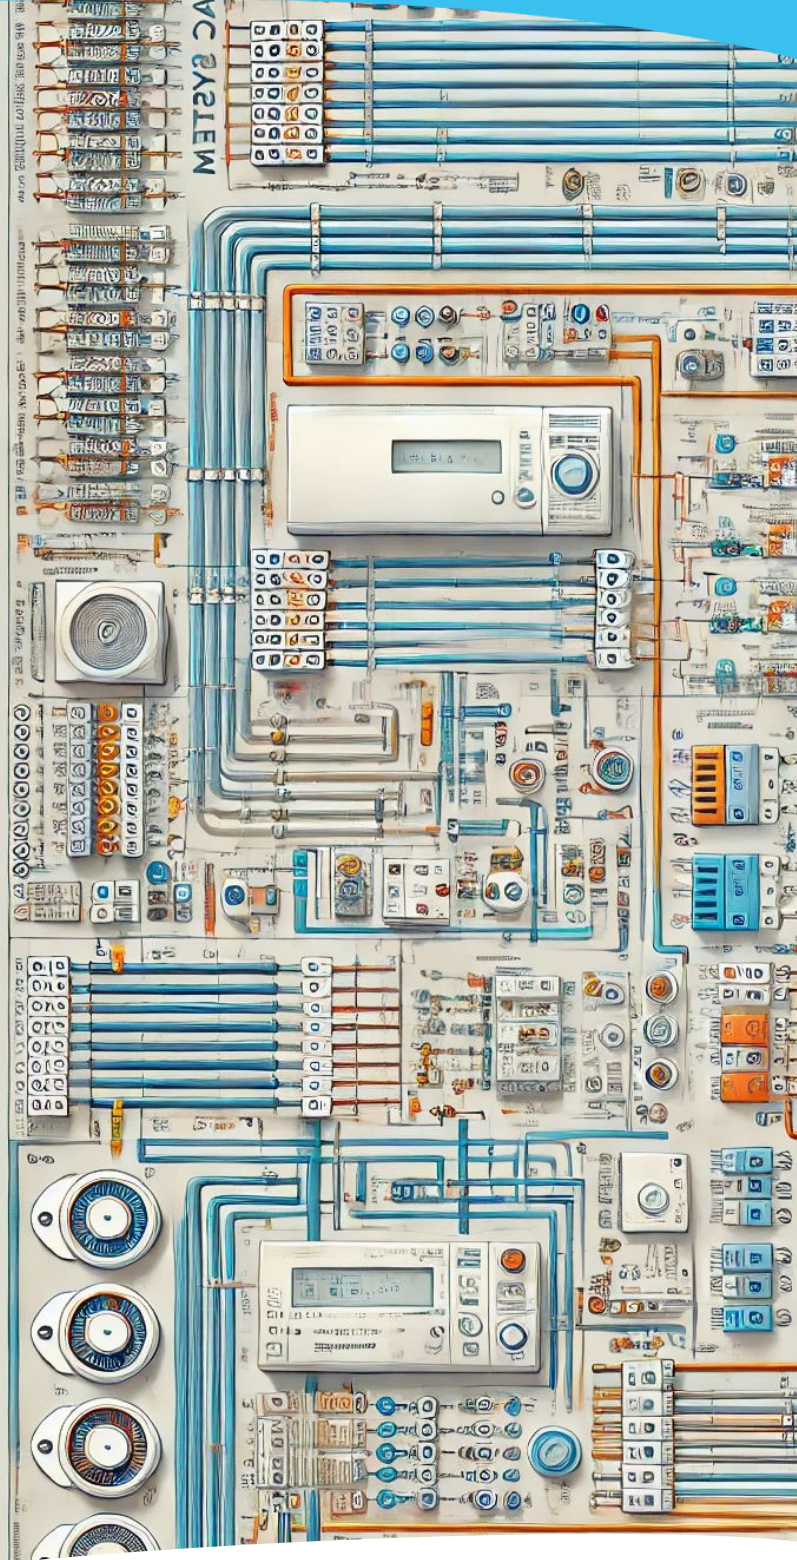

Contents

1. Overview	3
1.1 About This Document	3
1.2 Wiring Guidance for Flair Devices	4
2. Staged Heating Applications	5
2.1 Boilers - “Lockout” Configuration	5
2.2 Boilers - “Controller” Configuration	6
2.3 Electric Baseboard Heaters - One Zone	7
2.4 Electric Baseboard Heaters - Two Zones	8
2.5 Electric Baseboard Heaters - Two Zones with External Transformer	9
2.5 Electric Baseboard Heaters - Seven Zones	10
3. Zoning and Balancing with Smart Vents	11
3.1 Hardwired Power for Smart Vents (optional)	11

We’re Here to Help

CONTACT FLAIR



For dedicated dealer phone and email support, [login](#) or [register](#).



Existing Flair Pro?

Login to the [Pro Portal](#) for contact information.

PRO PORTAL

flair.co/pros

Not yet a Flair Pro?

Complete the [Pro registration](#) and a member of our team will be in touch.

PRO REGISTRATION

flair.co/register

1.1 About This Document

Purpose

This document provides detailed instructions for wiring Flair Products including the Bridge Pro, Flair Smart Vents and the Puck/Puck Pro.

Audience

This document is intended for:

- **HVAC Contractors:** Professionals responsible for installing and maintaining heating systems.
- **System Integrators:** Those configuring multi-stage heating solutions with Flair products.
- **Advanced Users:** Homeowners with technical expertise who wish to optimize their heating systems.

Scope

This document covers:

- Wiring for boiler based staged heating systems and their various configurations.
- Wiring for electric baseboard heating systems and their various configurations.
- Wiring and wiring installation guidance for hardwiring power to Flair Smart Vents.

NOTE: This document does not include detailed instructions for setting up Flair solutions, Flair App configuration, product specifications etc. Those materials are available at the Pro Training Center.

PRO TRAINING

flair.co/protraining



A Note On Safety

Always turn off breakers and unplug equipment prior to installation and wiring of flair or third party equipment regardless of voltage and other safety precautions. Always use proper personal protective equipment (ppe) including but not limited to eye protection, insulated tools, gloves, etc.

ANY AND ALL WORK IS DONE ON AN INDEPENDENT BASIS FROM STANDARD EULER INC. (DBA FLAIR), "FLAIR", WITH FLAIR ASSUMING NO LIABILITY, INDEMNITY, OR RESPONSIBILITY FOR INJURY, DEATH, DAMAGE, ETC. FOR FULL WARRANTY AND END USER LICENSE AGREEMENTS, SEE [FLAIR.CO/LEGAL](https://flair.co/legal)


Bridge Pro Wiring and Terminal Block

Powering the Bridge Pro

The Bridge Pro can be powered either by USB-C or via 24 VAC.

Terminal Block

Wires should be routed away from the Bridge Pro's antenna. The terminal blocks on the Bridge Pro are intended for 'Thermostat Wire' and support 18-26 AWG solid wire. Wire should be stripped $\frac{1}{4}$ " to ensure an adequate connection upon insertion and minimize the chances of a short. The terminal block has two holes - the bottom hole is for the wire. To remove a wire, gently press the square release button while pulling on the wire.

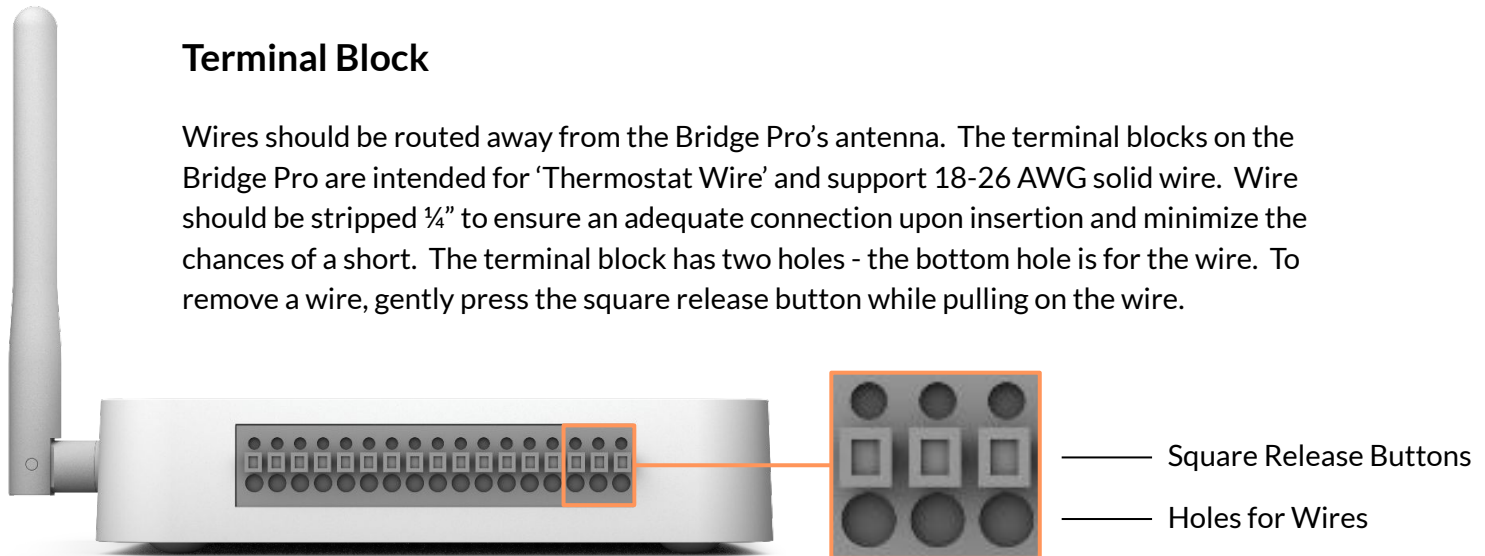

Puck/Puck Pro

Powering the Puck

The Puck or Puck Pro can be powered via AAA batteries or micro-USB (both included). Additionally, the Puck can be powered via the USB Mount Accessory which allows for mounting and powering a Puck on a USB A outlet.



NOTE: Always use the micro-USB cable provided by Flair if powering the Puck via a USB adapter. If using a third party micro-USB pigtail, the usb data lines must be left fully disconnected including from one another.

Smart Vent Wiring

Power the Smart Vent

The Smart Vent is designed to accept 20 AWG, plenum rated wire. Smart Vents can be wired together in parallel to a common transformer but should not be wired in series. Refer to the 'Hardwired Power for Smart Vents' section for additional details and guidance.

2.1 Boilers - "Lockout" Configuration



Overview

In this configuration, the Bridge Pro is "locking out" each boiler zone based on the systems staged heating settings in the Flair App. Electrically, think of the Bridge Pro as an additional relay in series with the thermostat such that a call for heat will only cause the zone to heat if both the thermostat is calling for heat and if the Bridge Pro 'unlocks' the zone.

This configuration leaves existing boiler thermostats in place and is compatible with any 24 VAC thermostat, smart or otherwise.

This diagram depicts a 7 zone boiler system, the maximum number of zones that a single Bridge Pro can support.



STAGED HEATING GUIDE



flair.co/staged-heating-guide



BRIDGE PRO SPECS

flair.co/bp-spec

Example of splicing the Bridge Pro into thermostat wiring. In this example, we splice in at the zone control board thermostat connection.

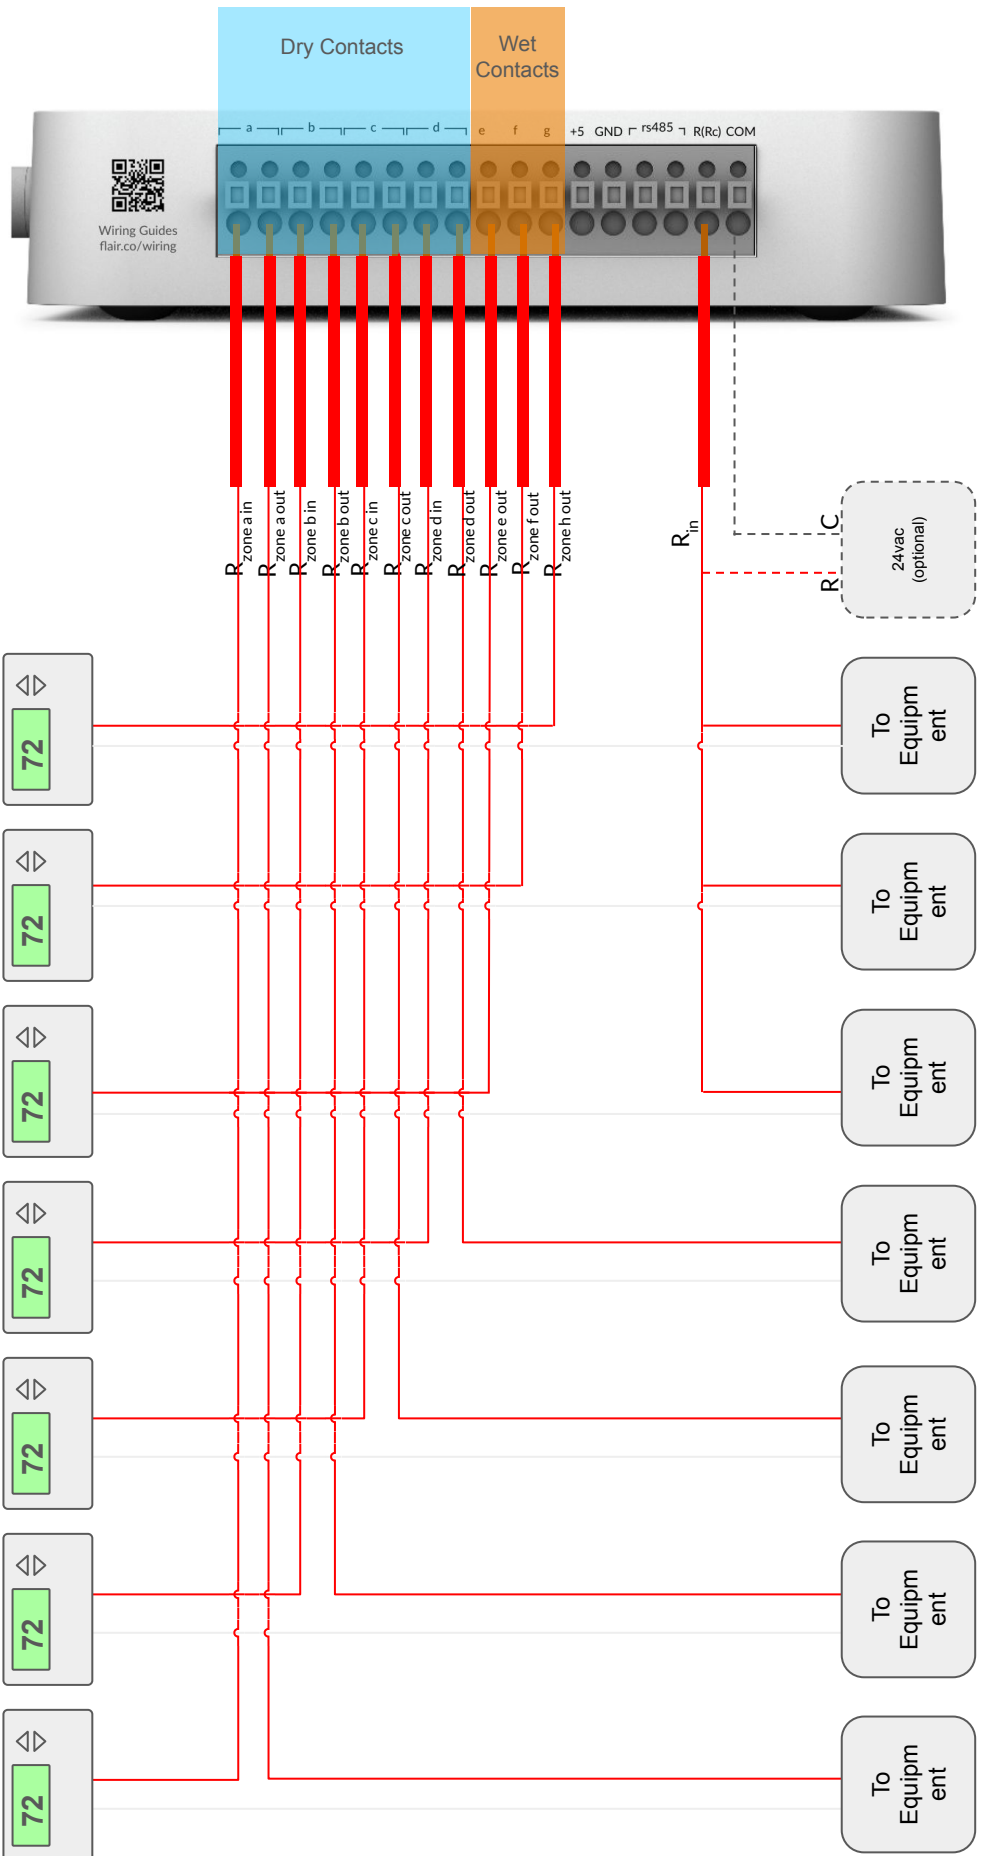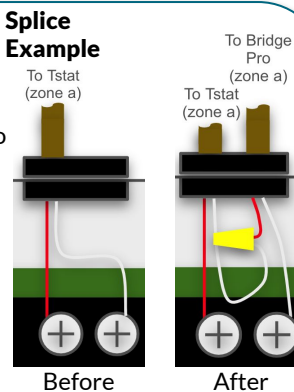

2.2 Boilers - "Controller" Configuration



Overview

In this configuration, the Bridge Pro in combination with Puck Pros serve as the thermostat system for both the DHPs and Boiler system, selecting which system to use based on the staged heating settings in the Flair App.

This diagram depicts a 7 zone boiler system, the maximum number of zones that a single Bridge Pro can support.



STAGED HEATING GUIDE

flair.co/staged-heating-guide

Step-by-step Installation & Staged Heating Operations





BRIDGE PRO SPECS

flair.co/bp-spec

Detailed Bridge Pro Specifications

Optional Puck Power via Existing Thermostat Wire and Bridge Pro

If you are removing an existing boiler thermostat, you can utilize the existing wire pull to power one Puck or Puck Pro using the +5 and GND from the Bridge Pro and a microUSB pigtail. Note - ensure the data lines on the microUSB pigtail are not connected to anything including themselves.

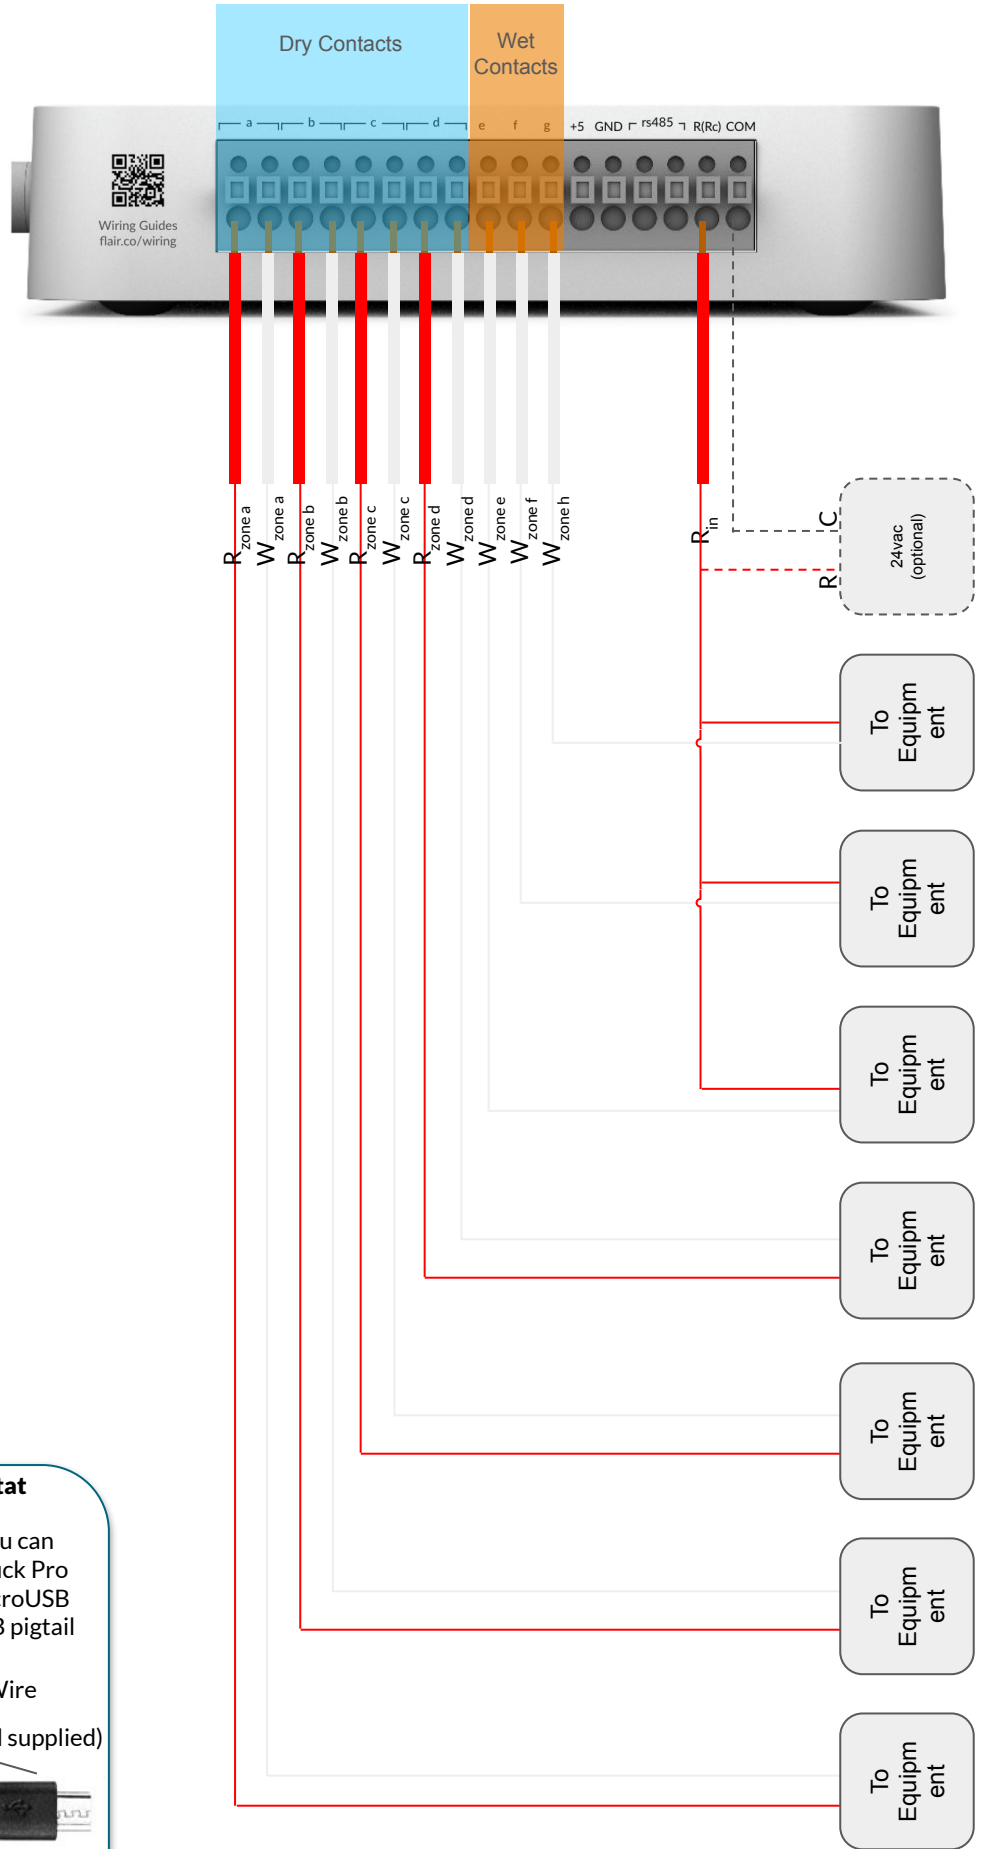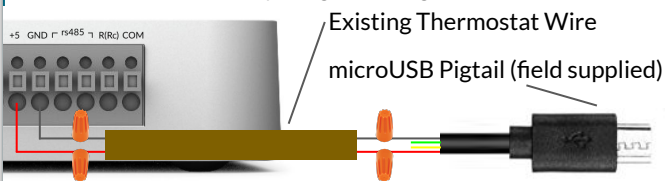

2.3 Electric Baseboard Heaters - One Zone

Overview

In this diagram, the Bridge Pro is working with a single 24 VAC controlled line level relay to switch an electric baseboard heater zone. In this diagram, the Bridge Pro is also running off of the internal 24 VAC transformer in the RC840T thus no USB power needs to be supplied to the Bridge Pro.

If a line level thermostat is in line between the line level relay and the heater itself, then the system should be configured as a 'Lockout' system in the App.

If there is no line level thermostat (for instance, if a prior line level stat was removed, the connections wire nutted together, and the junction box covered with a blank), then the zone should be configured as a 'Controller'.



STAGED HEATING GUIDE

flair.co/staged-heating-guide


Step-by-step Installation
& Staged Heating Operations



BRIDGE PRO SPECS

flair.co/bp-spec

Detailed Bridge
Pro Specifications

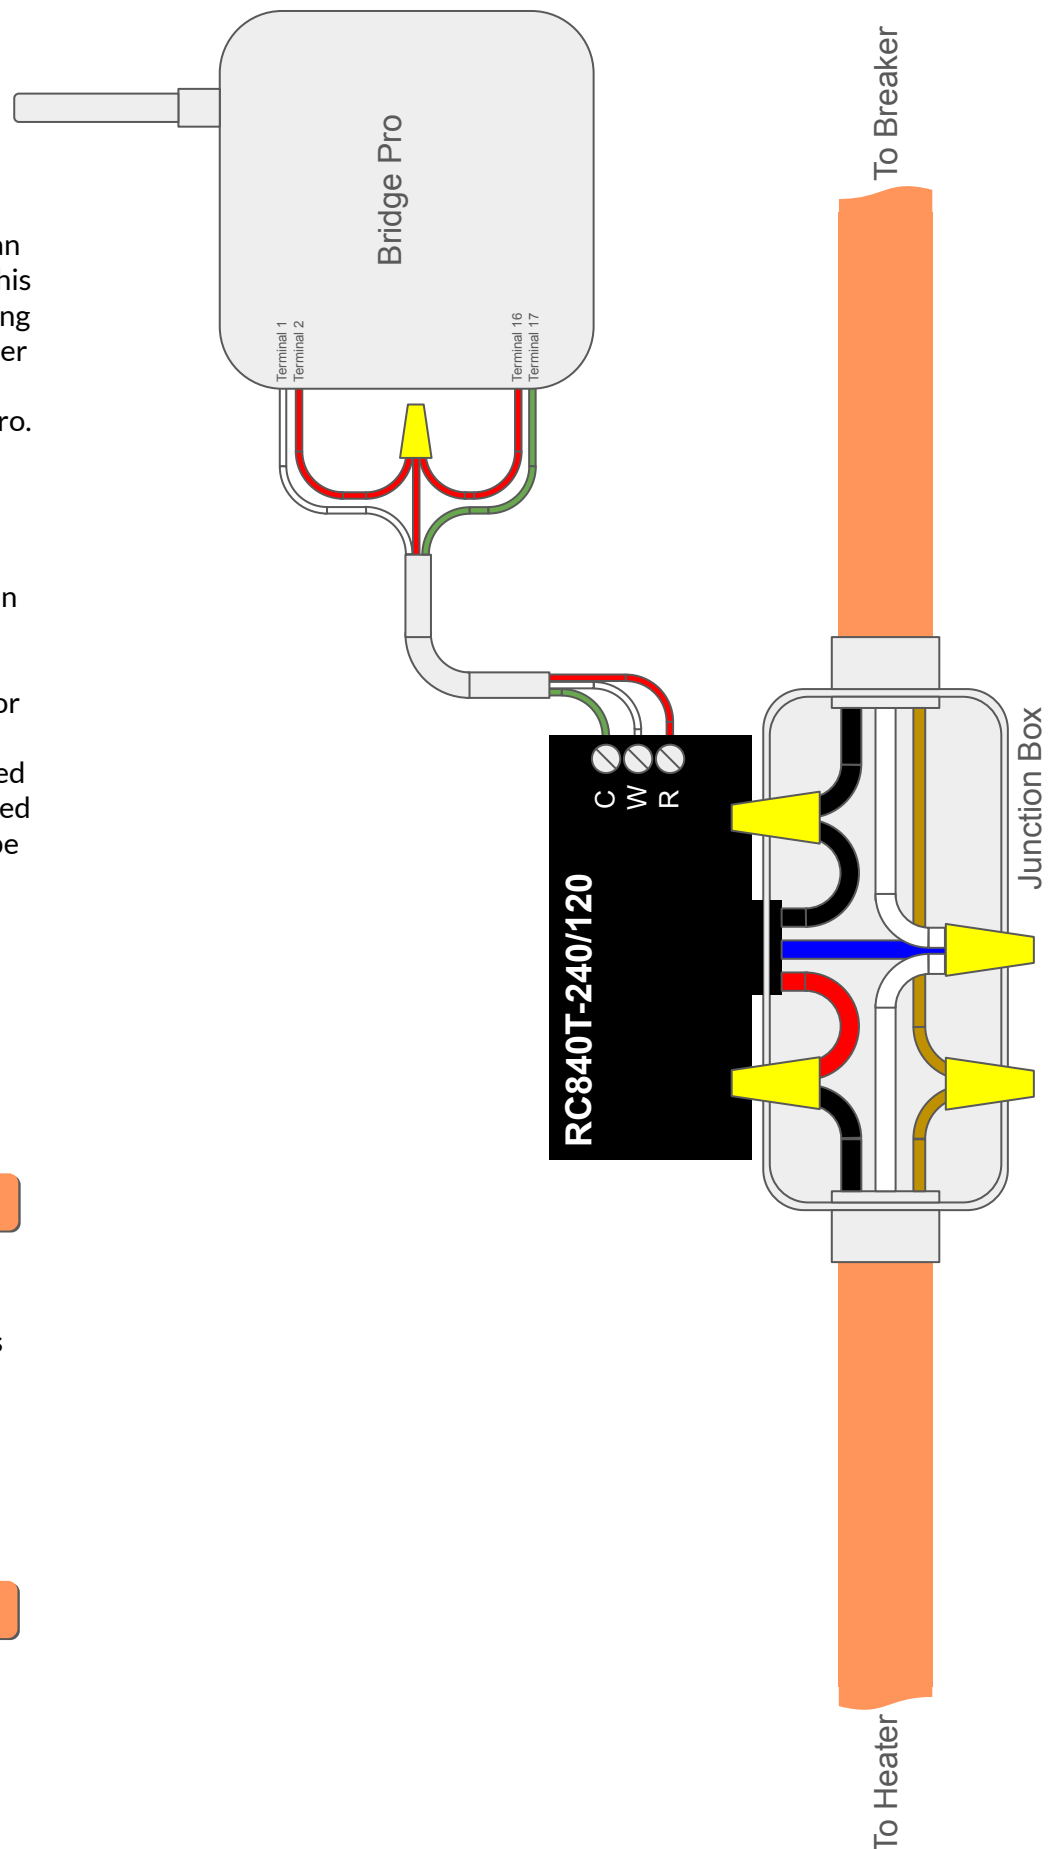


2.4 Electric Baseboard Heaters - Two Zones

Overview

In this diagram, the Bridge Pro is working with two 24 VAC controlled line level relays to switch two electric baseboard heater zones. In this diagram, the Bridge Pro is also running off of the internal 24 VAC transformer in the RC840T thus no USB power needs to be supplied to the Bridge Pro. Note that after the first relay, the Common ('C') connection on the second line level relay is left disconnected.

If a line level thermostat is inline between the line level relay and the heater itself, then the system should be configured as a 'Lockout' system in the App.

If there is no line level thermostat (for instance, if a prior line level stat was removed, the connections wire nutted together, and the junction box covered with a blank), then the zone should be configured as a 'Controller'.

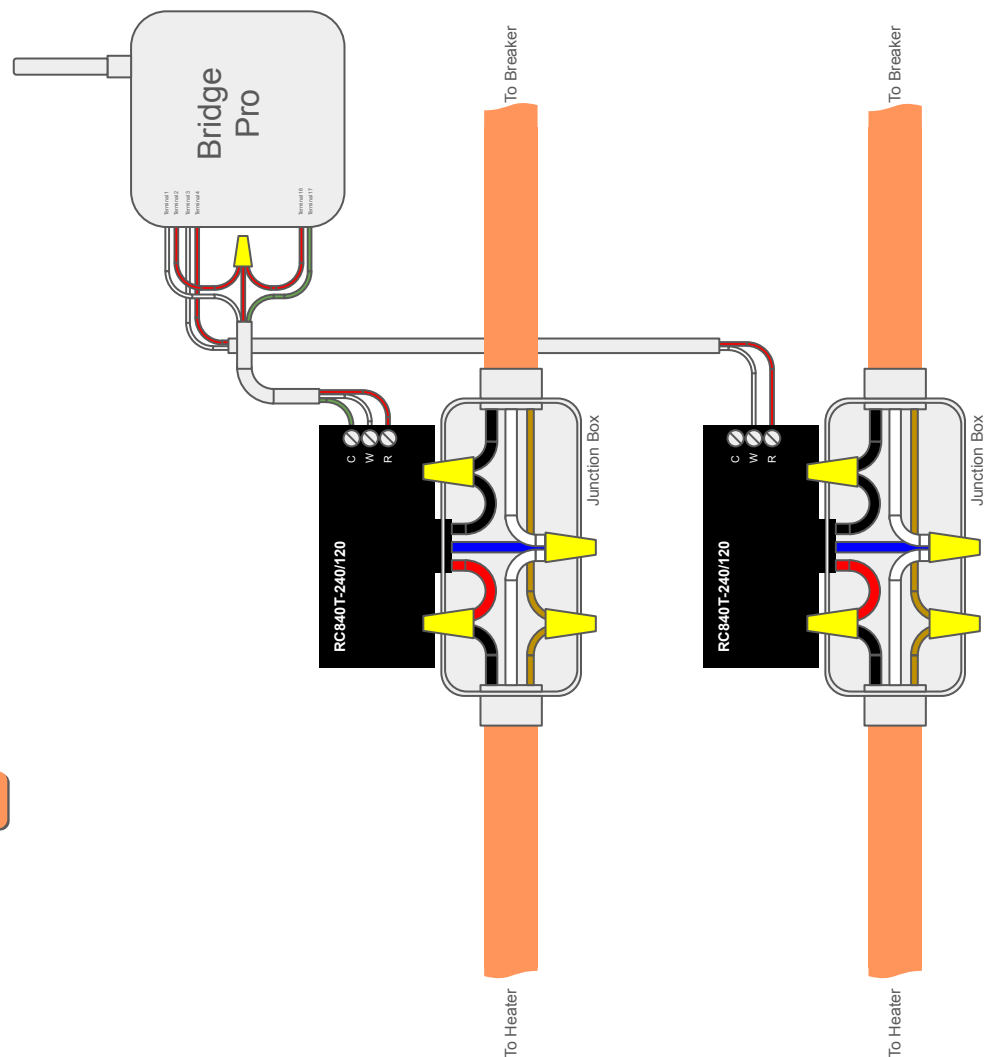

STAGED HEATING GUIDE

flair.co/staged-heating-guide

Step-by-step Installation
& Staged Heating Operations



BRIDGE PRO SPECS

flair.co/bp-spec

Detailed Bridge
Pro Specifications

2.5 Electric Baseboard Heaters - Two Zones

With External Transformer


Overview

In this diagram, the Bridge Pro is working with two 24 VAC controlled line level relay to switch an electric baseboard heater zone. In this diagram, the Bridge Pro is also running off of an external 24 VAC unlike the prior diagrams.

The advantage of this configuration is that the same line level relay can be used regardless of whether the electric heater is 120VAC or 240VAC.

If a line level thermostat is inline between the line level relay and the heater itself, then the system should be configured as a 'Lockout' system in the App.

If there is no line level thermostat (for instance, if a prior line level stat was removed, the connections wire nutted together, and the junction box covered with a blank), then the zone should be configured as a 'Controller'.

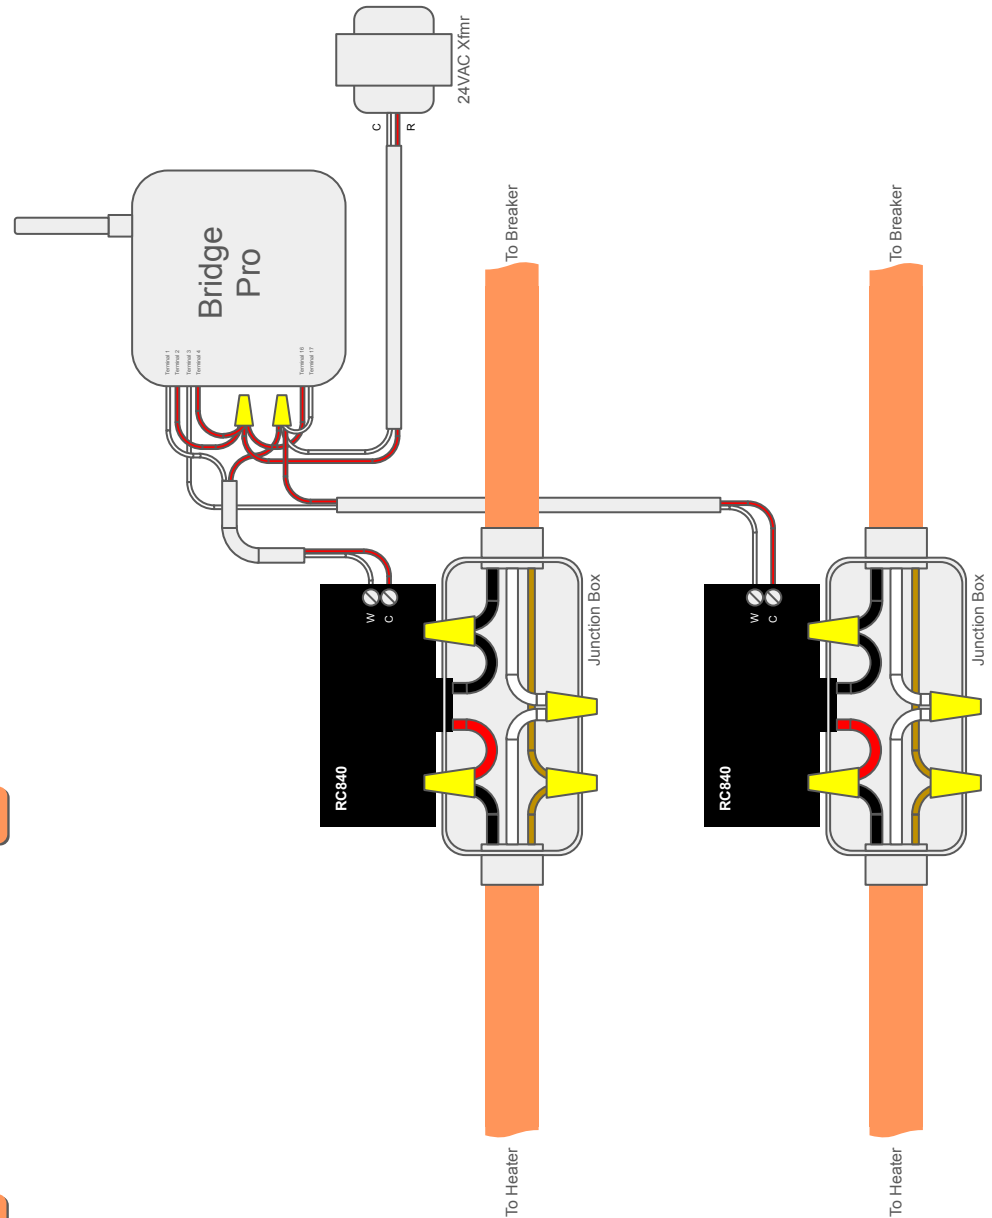

STAGED HEATING GUIDE

flair.co/staged-heating-guide

Step-by-step Installation
& Staged Heating Operations




BRIDGE PRO SPECS

flair.co/bp-spec

Detailed Bridge
Pro Specifications

2.6 Electric Baseboard Heaters - Seven Zones

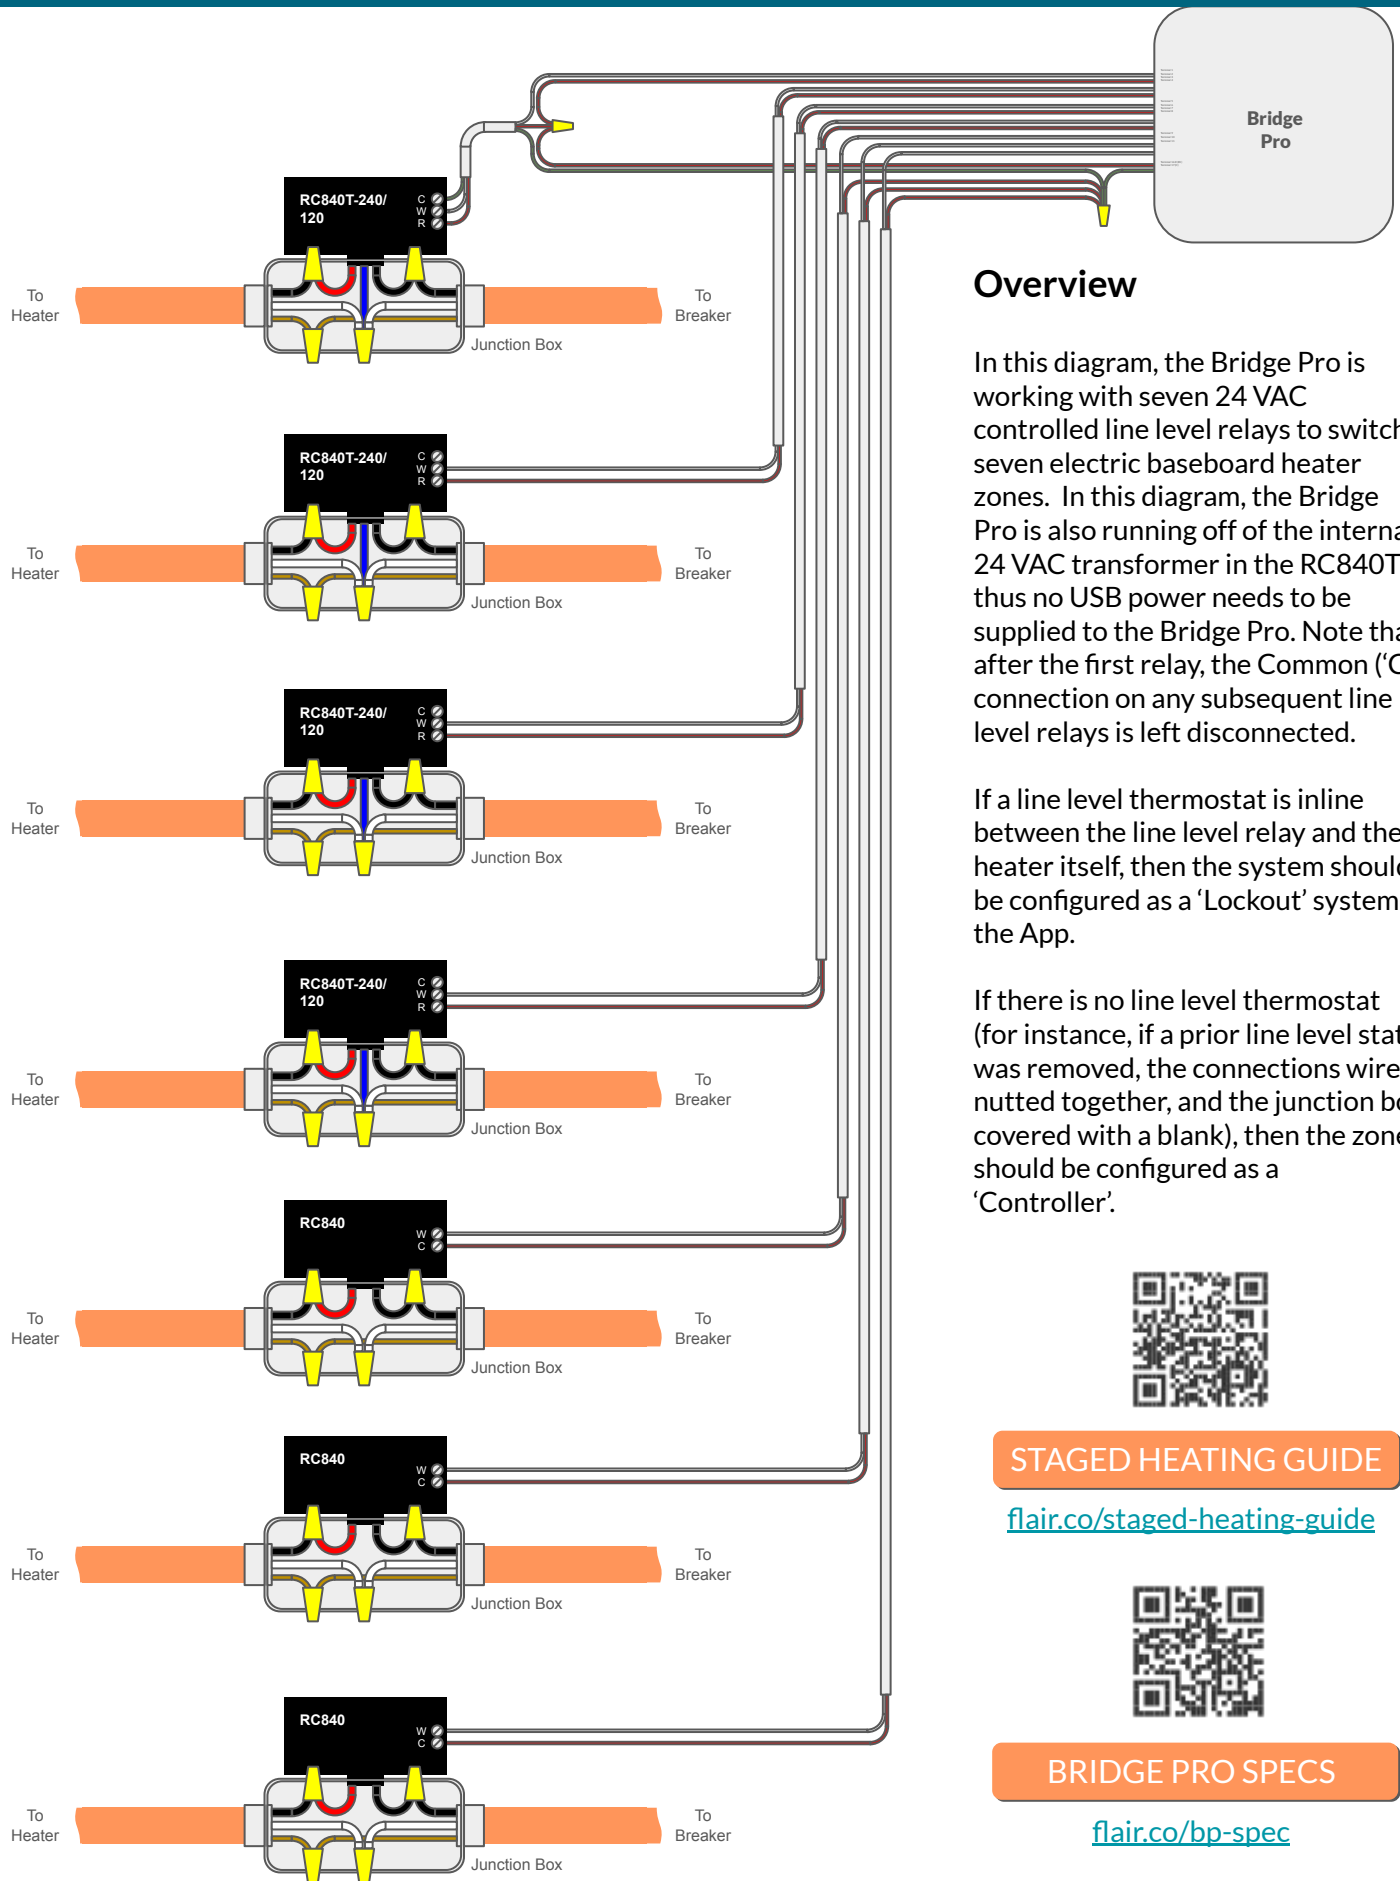

Overview

In this diagram, the Bridge Pro is working with seven 24 VAC controlled line level relays to switch seven electric baseboard heater zones. In this diagram, the Bridge Pro is also running off of the internal 24 VAC transformer in the RC840T thus no USB power needs to be supplied to the Bridge Pro. Note that after the first relay, the Common ('C') connection on any subsequent line level relays is left disconnected.

If a line level thermostat is inline between the line level relay and the heater itself, then the system should be configured as a 'Lockout' system in the App.

If there is no line level thermostat (for instance, if a prior line level stat was removed, the connections wire nuted together, and the junction box covered with a blank), then the zone should be configured as a 'Controller'.



STAGED HEATING GUIDE


flair.co/staged-heating-guide



BRIDGE PRO SPECS

flair.co/bp-spec

3.1 Hardwired Power for Smart Vents

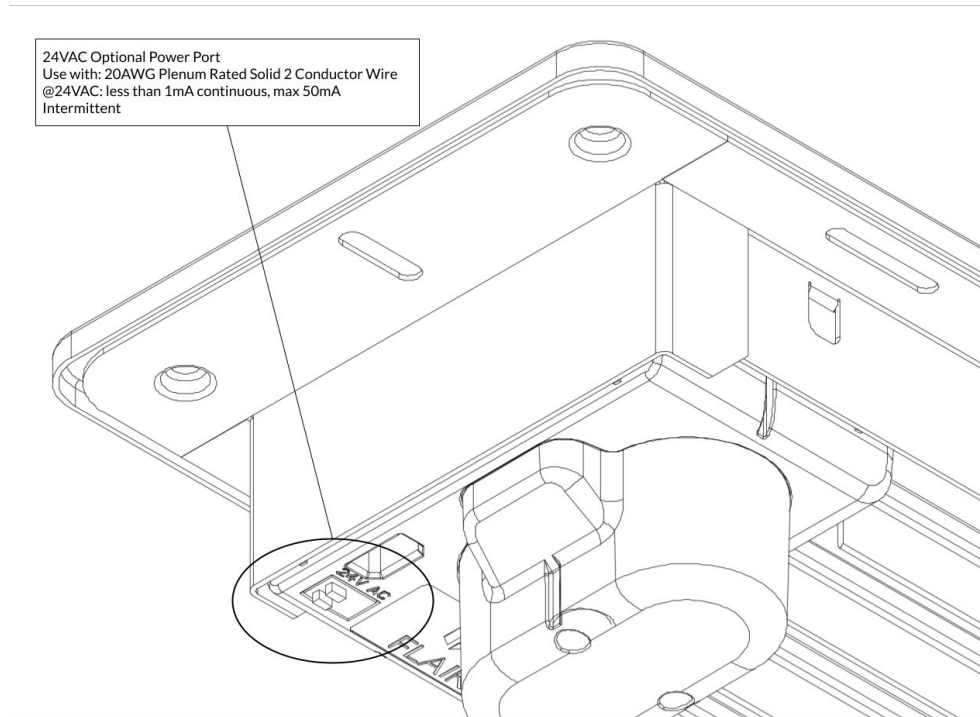

Installation


1. Drill hole in boot or duct near vent, where convenient. Hole size should be large enough for 20AWG Plenum Rated Solid (2 Conductor) wire.
2. Slide 20AWG Plenum Rated Solid (2 Conductor) wire through hole into boot.
3. Pull enough through to reach back of vent (boot dependent) - if you pull some extra, you can trim it later. When pulling the wire through, be careful to avoid stripping the wire on the metal boot or duct as this could lead to a short.
4. Using high quality Duct Tape or Mastic, seal the hole around the wire and the hole in the duct or boot.
5. Strip insulation and insert each conductor into the 24VAC port on back side of Flair Smart Vent (either wire can go in either hole, polarity does not matter).
6. If there is excessive wire in the boot or duct, trim the wire repeat step 5. Ensure that the wire doesn't interfere with the louvre movement. Also ensure the two wires are fully separated and cannot short near the vent terminal block. In case of excess exposed wire at the vent terminal block, press the release buttons on the terminal block and pull the wire out. Trim exposed wire as needed and reinsert.
7. Connect the other end of wire to a 24VAC transformer/power supply (note that you will not need to wire to the ground pin/terminal if one is available).
8. Assemble battery related parts on vent according to regular installation process - there is no need to install the actual batteries.
9. Continue with regular installation and setup process.
10. Plug in or power 24VAC power supply/transformer.

Electrical Notes



- Flair Vents operate with very low power requirements and operate at different times hence a 40VA (@24VAC) will suffice for in excess of 10 vents. Beyond 10 Vents, it is recommended that you consider additional power supplies due to the length of the wire runs becoming very long.
- Grounding is not needed.
- Max length from transformer to Smart Vent should be 100 feet or less if using 20 AWG copper. If using aluminum or steel, please keep distances shorter.

3.1 Hardwired Power for Smart Vents

Parallel - YES

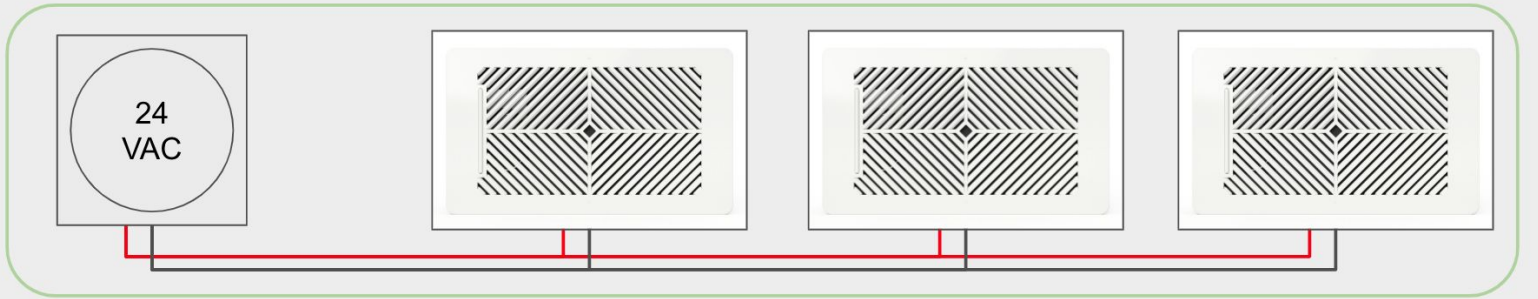

Series - NO

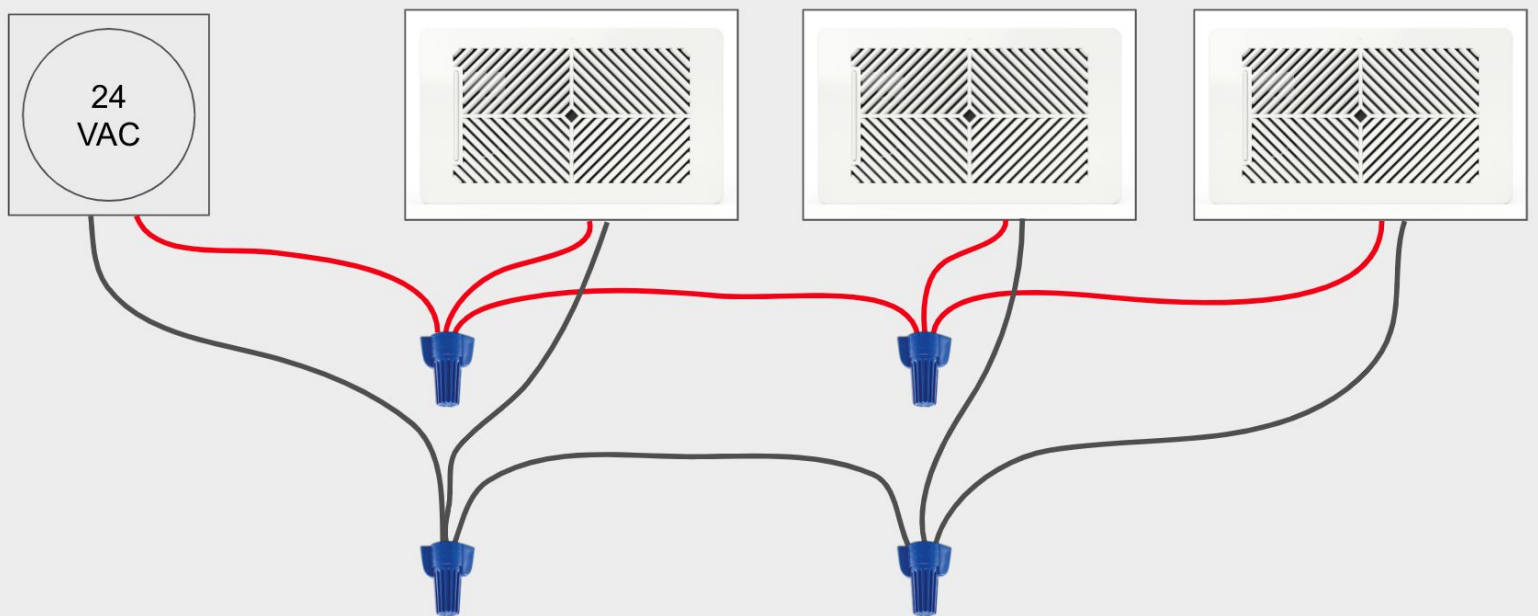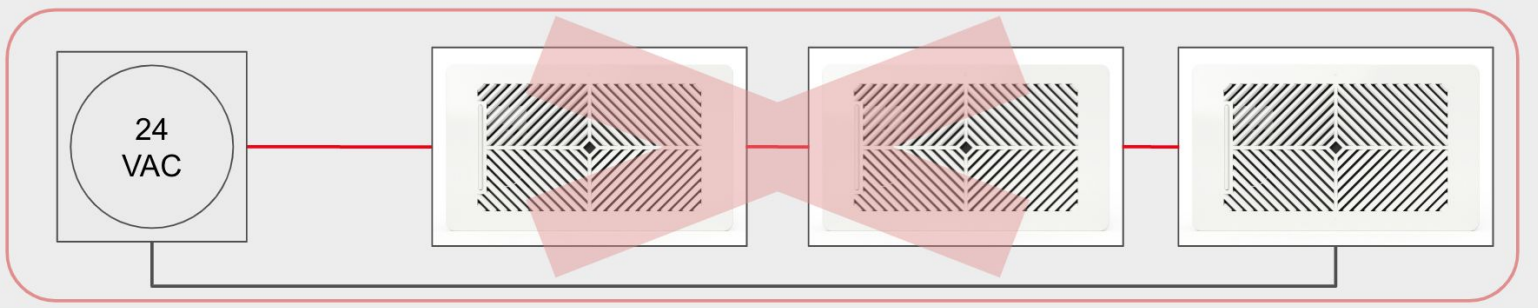

STAGED HEATING GUIDE

flair.co/staged-heating-guideStep-by-step Installation
& Staged Heating Operations

BRIDGE PRO SPECS

flair.co/bp-specDetailed Bridge
Pro Specifications